

Samsung Galaxy Tablet








Different apps used on Samsung Galaxy Tablet

- Video Streaming
- Games
- Reading
- Photo & Video
- Email
- Video calls
- Smart Home
- Money
- Travel & Insurance

An advertisement for the Hoopla app. The background is a solid blue color. At the top, the word "hoopla" is written in a large, white, lowercase, sans-serif font. Below the logo, the text "Tap into Discovery. Instantly Read, Listen, and Watch with Your Library Card." is displayed in white. Underneath this, the heading "3-Step Sign-Up" is followed by a numbered list: "1. Download the app or go to hoopladigital.com.", "2. Log in with your library card.", and "3. Borrow and enjoy!". In the bottom right corner, a hand is holding a Samsung Galaxy tablet. The tablet screen shows the Hoopla app interface, which features a grid of book covers including "Harry Potter", "The Mountains Sing", "If for Any Reason", "Writers & Lovers", "The Willoughby", and "Stranger Diaries". A finger is pointing at one of the book covers on the screen.

hoopla®

Tap into Discovery.
Instantly Read, Listen, and Watch
with Your Library Card.

3-Step Sign-Up

1. Download the app or go to hoopladigital.com.
2. Log in with your library card.
3. Borrow and enjoy!

Samsung Galaxy Tablet Models



Galaxy Tab S10 Series

Experience Galaxy AI on a giant screen.¹



Galaxy Tab S9 Series

Stunning screens, durability and power.



Galaxy Tab S9 FE Series

The new standard of tablet essentials.

 


Galaxy Tab A9+

A screen for every scene.

<https://www.samsung.com/us/tablets/>

https://www.samsung.com/hk_en/support/mobile-devices/where-are-button-s-ports-sensors-on-galaxy-tab-s-what-do-buttons-do/

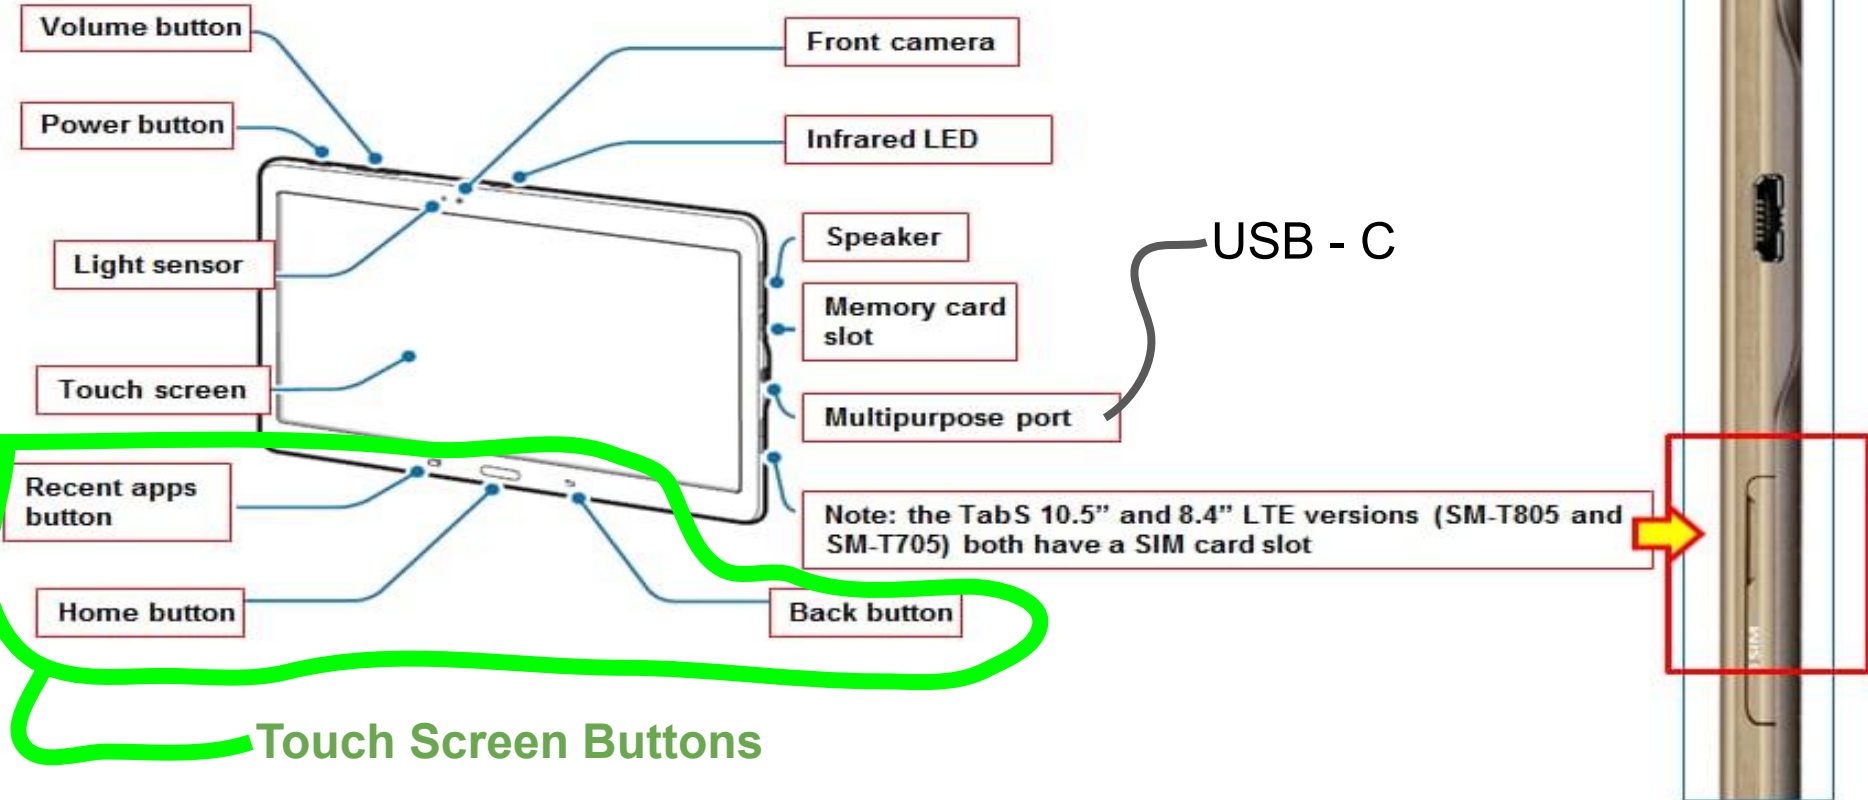

USB PORT by Tablet Model

Galaxy S	Tab S3, Tab S4, Tab S5e, Tab S6, Tab S7/S7+.	USB- C
	Tab S and Tab S2	
Galaxy E	Tab E	Micro USB
Galaxy A	Tab A 10.1 (2019-2020), Tab A 10.5 (2019), Tab A 8.0 (2016-2019), and Tab A 8.4 (2020).	USB-C
	Tab A 10.1 (2016), Tab A 8.0 (2015), Tab A 7.0, and Tab A 9.7.	Micro USB

Optimize Charging Habits:

Avoid Overcharging:

While modern tablets often have protection against overcharging, it's still best to avoid keeping the tablet plugged in for extended periods after it's fully charged.

Charge to 80%:

Ideally, charge your tablet to around 80% and avoid letting it drain completely, as this can put strain on the battery.

Avoid Extreme Temperatures:

Keep your tablet in a cool, dry environment, as extreme temperatures can negatively impact battery performance and lifespan.

Consider Smart Charging:


Some tablets offer smart charging features that can optimize the charging process and extend battery life.

Other Tips:

- **Keep Software Updated:** Software updates often include battery optimization improvements.
- **Store Half-Charged:** If storing for a long period, store the tablet with a 50% charge.
- **Power Down When Not in Use:** Turning off the tablet completely can prevent unnecessary battery drain.

Initial Setup:

- Powering on and navigating the welcome screens.
- Connecting to Wi-Fi.
- Setting up a Google account
 - (importance for Play Store).
- Setting up a Samsung account (benefits).
- Lock screen options
 - (pin number, fingerprint, facial recognition).

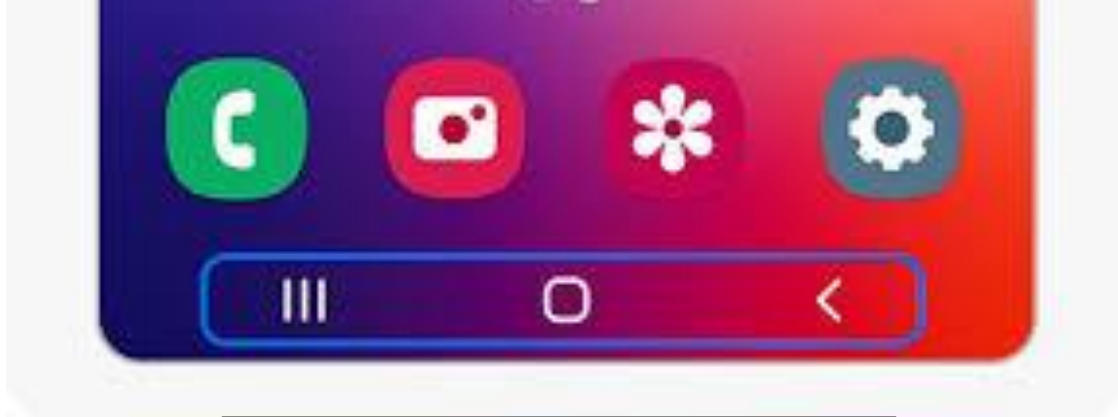

Recents:

The button to the far left. When you tap this, your recently opened apps will appear.

Home:

The button in the very center. Tap this to be taken to the Home screen.

Back:

The button to the far right. Tap this to go back to the previous screen.

Navigation Buttons

 
<https://www.samsung.com/us/support/answer/ANS10002427/>

QUICK ACCESS

Swipe from the middle center to the bottom.

Without going into the settings, access ON & OFF buttons for different features.

- WI-FI
- Bluetooth
- Airplane Mode
- Brightness
- Power Saver
- Auto Rotate

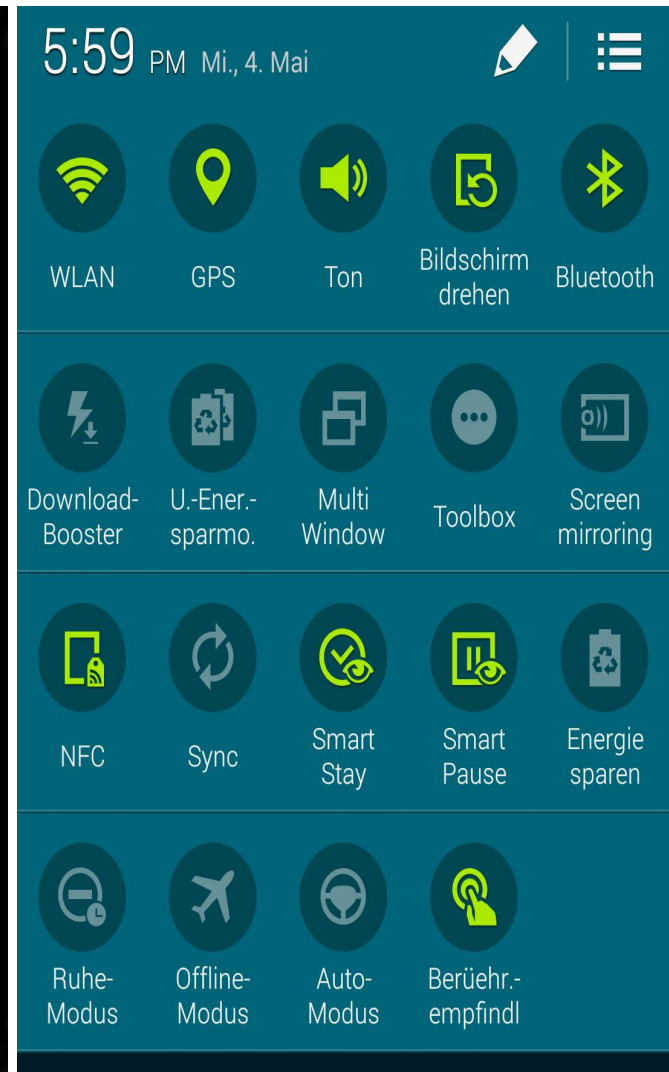

<https://www.samsung.com/uk/support/mobile-devices/what-do-the-different-indicator-icons-mean-on-your-galaxy-phone/>

https://www.samsung.com/latin_en/support/mobile-devices/what-do-the-different-indicator-icons-mean-on-your-galaxy-phone/#helpHtg1callOrder0_0&helpHtg2callOrder0_0&helpHtg3callOrder0_0&helpHtg4callOrder0_0&helpHtg5callOrder0_0&helpHtg6callOrder0_0



SETTINGS

- Change wallpaper & themes
- Adjust display settings
- Sound and notification settings
- Wi-Fi & Bluetooth
- Mobile Data

Connections

Wi-Fi

Bluetooth

Airplane Mode

Data Usage

Notifications

App Notifications

Lock Screen

Do not disturb

Display

Light & Dark Mode

Brightness

Font Size & Style

Screen Timeout

Screensaver

Wallpaper & Style

Change wallpaper

Lock screen

Screen Lock Type

PIN, Password, Pattern

Accounts & Backup

 
Save tablet data to Google Drive

Apps

Default Settings for app controls

User Guide

A website on how to use your current tablet.

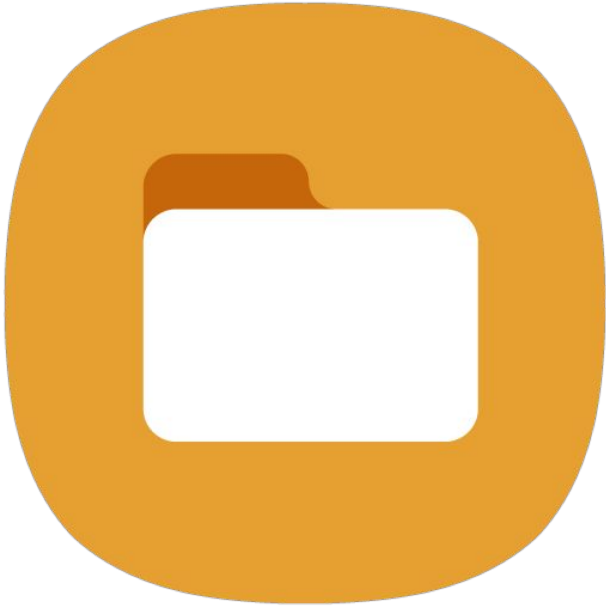

MY FILES

Documents

Downloads

Photos

Music

Podcasts

other phone data



GET IT ON
Google Play



Available on
Galaxy Store



The Samsung User Manual for your device

<https://www.samsung.com/us/support/answer/ANS10001611/>